

lip 09, 2018 09:33

ubiconf-Huddle Quick Start Guide - English

This ubiconf-Huddle Quick Start Guide provides the basic information about the device and explains how to use it during ubiconf videoconferences.

Created: December 2017

Online version: <https://confluence.wildix.com/x/GgEVAQ>

- [ubiconf-Huddle Introduction](#)
 - [Features](#)
 - [Packing list](#)
- [ubiconf-Huddle Overview](#)
 - [LED indicators Overview](#)
- [ubiconf-Huddle Connection](#)
 - [Connection of ubiconf-Huddle to PC or laptop](#)
 - [Ubiconf Videoconference Settings](#)

ubiconf-Huddle Introduction

ubiconf-Huddle is a Huddle room Conference Video Station with integrated audio and wide-angle camera, designed for Wildix WebRTC ubiconf videoconferences. The device is a plug&play solution that can be connected to a PC or laptop via USB cable without any preliminary installation or driver. In this way, ubiconf-Huddle ensures efficient collaboration in conference rooms up to 10 participants.

Features

- **HD Video.** The device supports 1080p HD video and provides users with high quality Internet video meetings and improves conference efficiency
- **Broader Horizon.** ubiconf-Huddle provides a wide-angle view up to 120 degrees, restoring the real scene and displaying more meeting details
- **Plug&Play.** The device provides Plug&Play capabilities and can be easily implemented by any user
- **Universal Omnidirectional Microphone.** It has strong echo suppression and noise reduction ability for ensuring a clear voice during conferences.
- **Cost reduction of team collaboration.** ubiconf-Huddle brings more convenient and online real-time meeting, reducing the cost of the meeting greatly.

Packing list

Before you start using this ubiconf-Huddle, please verify that your package contains the following items:

- 1 x ubiconf-Huddle
- 1 x USB cable
- 1 x portable case

ubiconf-Huddle Overview



- 1 - Microphone (with echo cancellation)
- 2 - HD camera
- 3 - **Volume +** touch key
- 4 - **Volume -** touch key
- 5 - **Mute/ Unmute** touch key
- 6 - Speaker


LED indicators Overview

Color	LED indication	Status
Blue	Steady On	Active, works normally
Red	Steady On	Microphone is disabled
Blue	Short flashing	Adjusting Volume
Blue	Long flashing	Speaker is disabled
Blue and red	Long alternate flashing	Microphone and speaker are both disabled

ubiconf-Huddle Connection

Connection of ubiconf-Huddle to PC or laptop

As ubiconf-Huddle is a plug&play solution, it can be used as long as connected to your PC or laptop by USB cable.

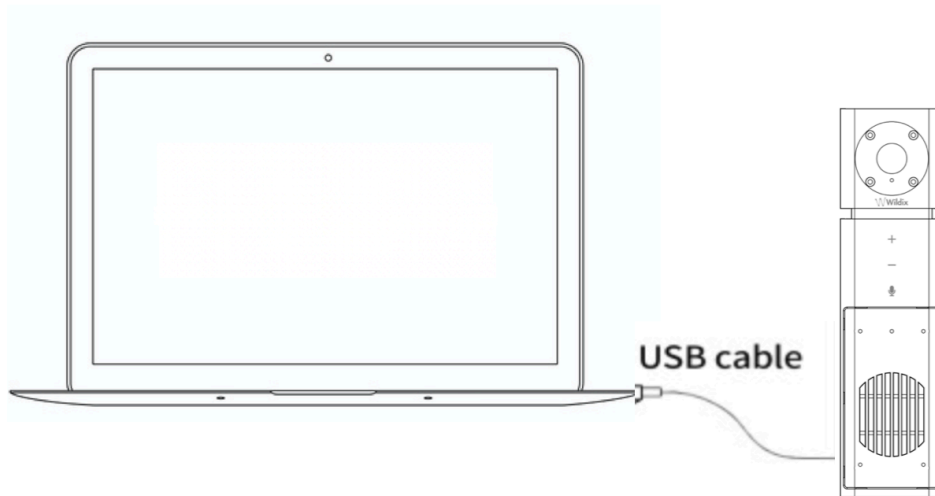

Ubiconf Videoconference Settings

To use ubiconf-Huddle during your ubiconf videoconferences:

1. Create a new ubiconf videoconference or join the existing one.

Note: Refer to [Ubiconf Videoconference Guide](#) for detailed information.

2. Select the following videoconference settings:
 - a. *Audio output* -> **ubiconf-Huddle**
 - b. *Microphone* -> **ubiconf-Huddle**
 - c. *Webcam* -> **ubiconf-Huddle**
3. Click **Join** to confirm

